

## Basic i-Guide Navigation Tips

- \* Yellow is always the highlight color. As you navigate listings using your remote, the highlight appears on screen to indicate your current selection.
- \* Press the **▲▼◀▶** buttons on your remote to move the highlight.
- \* Press **OK** to make your selection.
- \* Press the **EXIT** button on your remote to return to watching TV.

## Remote Control Features

**VOD**  
Direct Access to Video On Demand (VOD), where available

**Replay**  
Replays last 15 seconds of program

**Help**  
Learn more about a feature

**PAGE**  
Scroll to the next or previous page of listings

**Exit**  
Return to watching television

**OK**  
Select a highlighted item; or while watching a program, press to display or remove the **Flip Bar** or **Mini Guide**

**Guide**  
See program listings for the current time

**Day\***  
See listings for the next or previous day

**Numbers**  
Press channel numbers, then **OK/SEL** to tune to a channel

**PPV**  
Direct Access to Pay-Per-View (PPV), where available

**VCR Controls**  
Controls VCR, **ON DEMAND** and **Digital Video Recording** (if available)

**LiveTV**  
Displays live television programming

**FAV**  
Tune to your Favorite channels, once you set them up

**CHAN**  
Change channels and access the **Flip Bar**

**LAST**  
Return to the previous screen or channel

**Info**  
See program information

**Arrows**  
Use to highlight guide features, or while watching television, press to begin browsing. Note: Arrows control playback of recorded programs with **DVR**

**MENU**  
Enter and exit the **Main Menu**

**SWAP**  
Swap between television tuners

Note: Remote pictured may not reflect your actual remote. Basic functions should be the same.

\*Amount of programming data varies by system.